


MXV 25-...
 MXV 32-...
 MXV 40-...

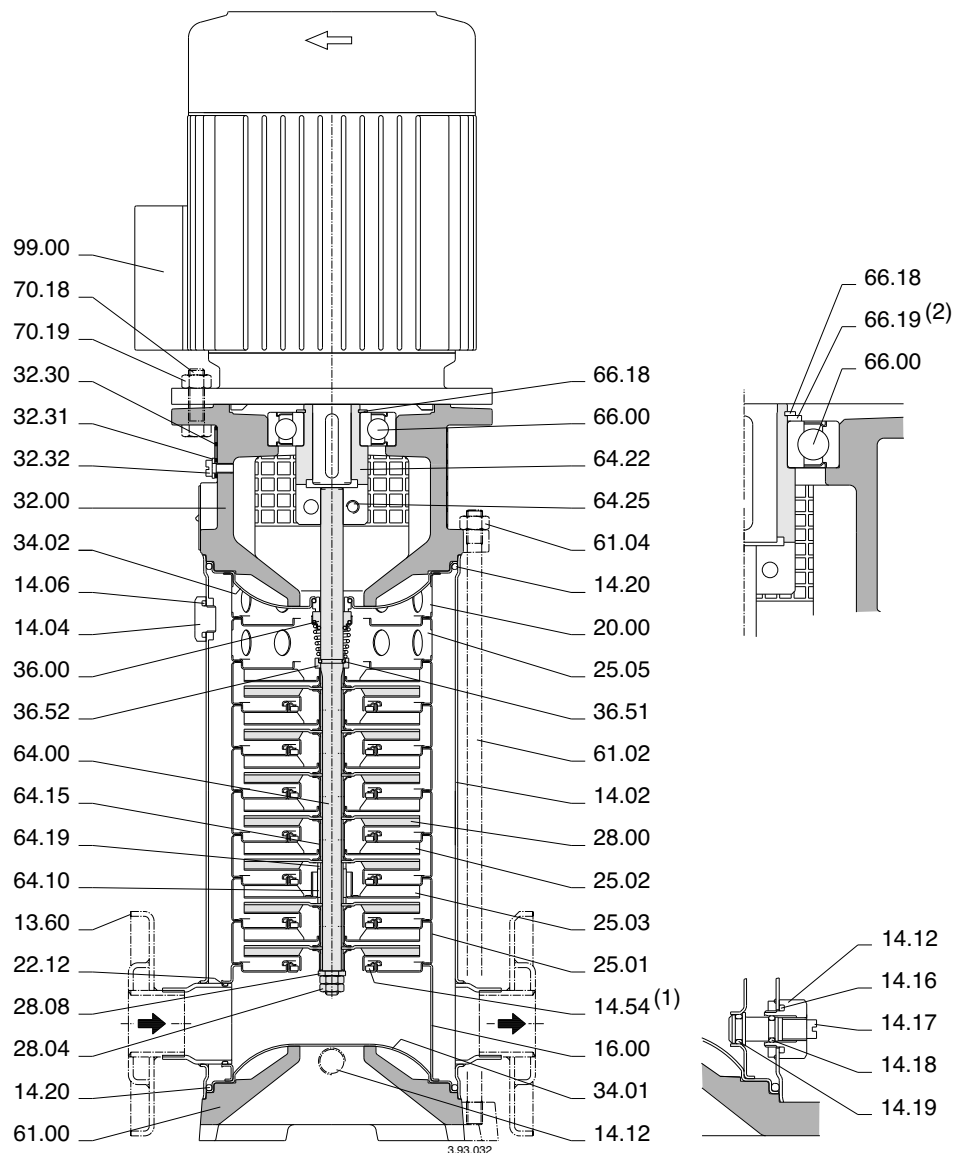


(1) Inserito nel corpo stadio
 Inserted in the stage casing
 Im Stufengehäuse eingepreßt
 Monté dans le corps étage
 Insertado en el cuerpo elemento
 Imonerad i mellanhuset


(2) Solo con grandezza motore 132
 Only for motor size 132
 Nur mit Motor-Baugröße 132
 Seulement avec moteur 132
 Solo con dimensión del motor 132
 Endast för motorstorlek 132

MXV 50-15..

MXV 50-20..

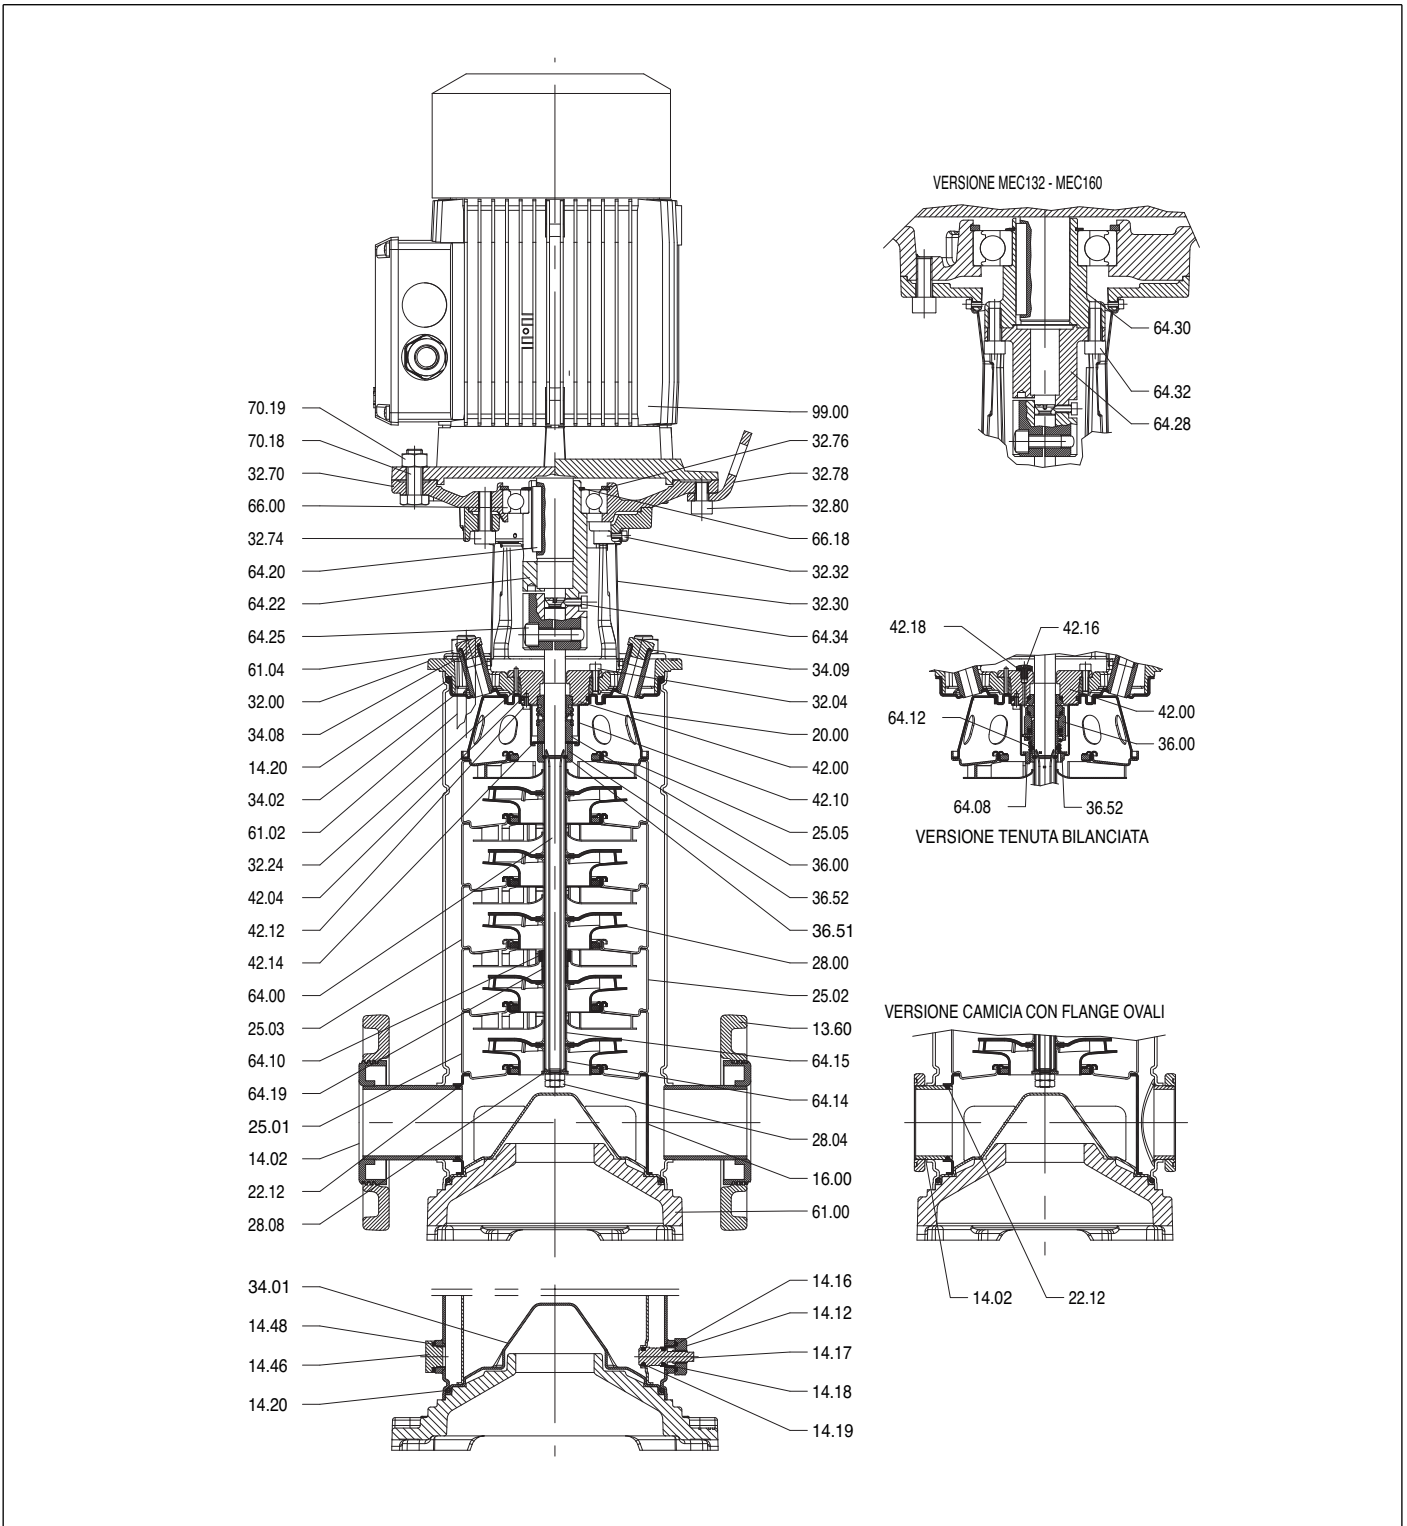


MXV 50-16..
 MXV 65-32..
 MXV 80-48..

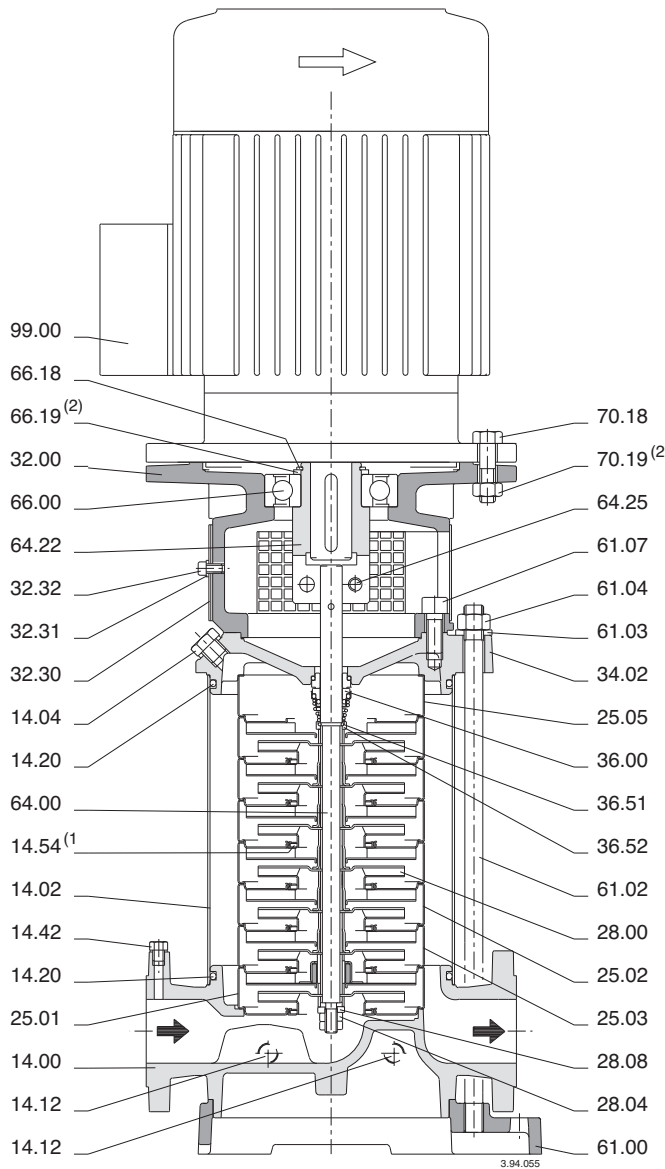


(1) Inserito nel corpo stadio
 Inserted in the stage casing
 Im Stufengehäuse eingepreßt
 Monté dans le corps étage
 Insertado en el cuerpo elemento
 Monterad i mellanhuset

(2) Non presente nei motori 100-112
 Not installed in motors 100-112
 Nicht bei Motoren 100-112
 Non present avec moteur 100-112
 No presente en los motores 100-112
 Ej installerad i motorerna 100-112

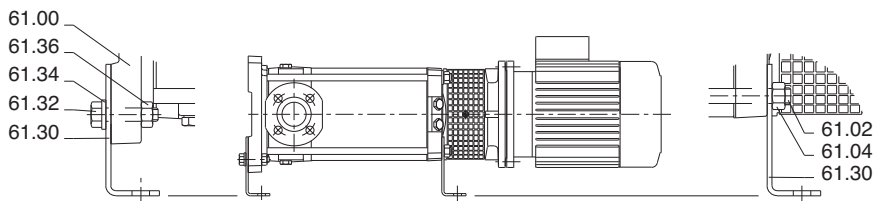

MXV 100-...

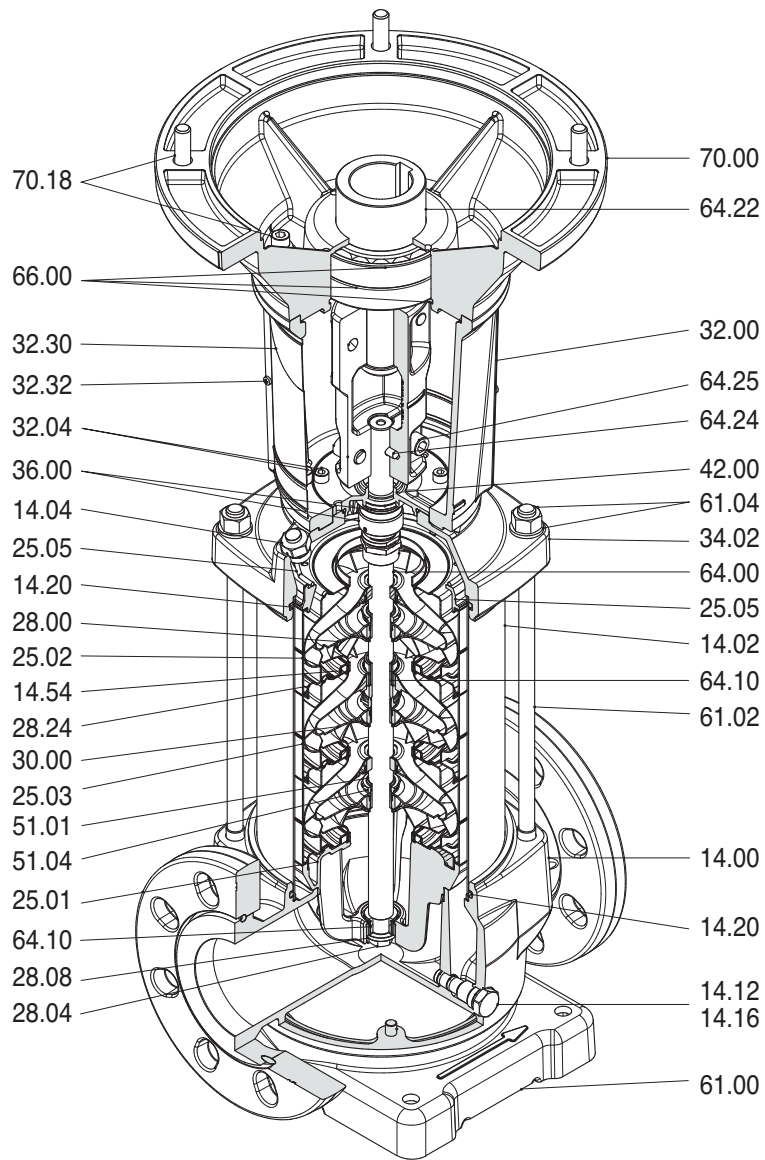

MXV-B 25-...
 MXV-B 32-...
 MXV-B 40-...

